## PRE-TRIP VEHICLE INSPECTION

## DATLY:

- • • Fluid level in engine / power steering / hydraulics / brake / clutch / coolant if applicable;
- • • All engine belts / hoses for leaks and wear;
- • • Tires for cuts / pressure / loose nuts / rims / wear;
- • • All lights are clean and working:
- • • Brake and clutch operation;
- • • Visible leaks around and under the vehicle:
- • • Start engine / check all gauges and instruments / horn / back up alarm;
- • • Glass and body for damage;
- • • Windshield wipers / fluid;
- •••• Check for unusual noises;

Note: Daily items should be checked by the driver of the vehicle.

## WEEKLY:

- • • Transmission / differential / transfer case / gear boxes / hydraulic system for fluid level and leaks, if applicable;
- • • Battery fluid / terminals / cables;
- • • Loose bolts / loose or bare wires;
- • • Exhaust system for looseness and leaks / springs;
- ••• Air filter / connections;

Note: Weekly items should be checked by individual assigned the responsibility for the repairs and general maintenance of the vehicle.

## IMPORTANT REMINDER

If you are traveling outside the Province, verify if there are specific requirements, special permits and/or the need to complete a logbook (depending on the size of the vehicle).